 







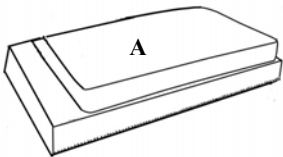
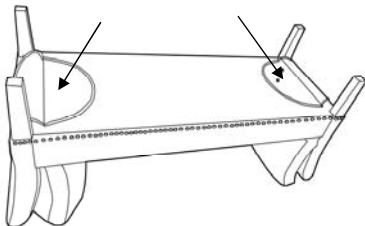
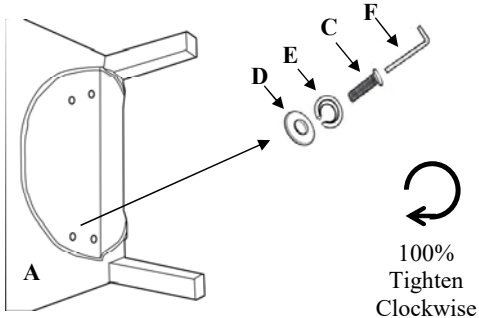
Assembly Instruction

WARNER BENCH

Thank you for purchasing this product. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.

It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

PARTS #	PARTS NAME	DRAWING	QTY/PC
A	SEAT BASE		1
B	BACK		2
C	BOLT		8
D	FLAT WASHER		8
E	SPRING WASHER		8
F	WRENCH		1

<p>1. Open the box and remove the dust cover from Bench. Take out the seat base (A).</p>	<p>2. Turn over the seat base (A), open the zipper pockets. Take out the backs (B) and hardware package.</p>
	
<p>3. Screw the backs (B) onto the threads inserts of the seat. Repeat the procedure with the other legs. Check that all legs are secure.</p>	<p>4. Close zipper pockets underneath. Level the bench and place upright on a level surface. Assembly is complete.</p>
 <p style="text-align: center;">100% Tighten Clockwise</p>	