












# ASSEMBLY INSTRUCTIONS | INDUSTRY MEDIA SIDEBOARD



HARDWARE CHECKLIST		
1		Bolts M6x20 (12pcs)
2		Washers M6 (14pcs)
3		Bolts M6x30 (6pcs)
4		Allen Key K4 (1pc)
5		Bracket (4pcs)
6		Tie (2pcs)
7		Screw M4x20 (4pcs)
8		Screw M4x35 (4pcs)



## Step 1

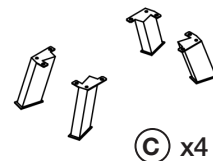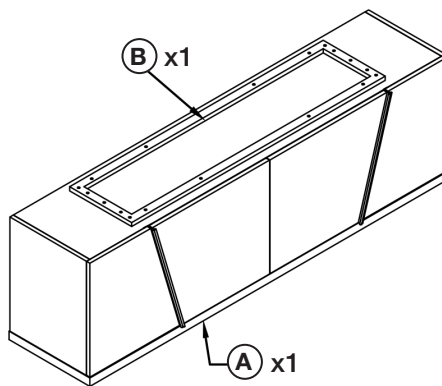
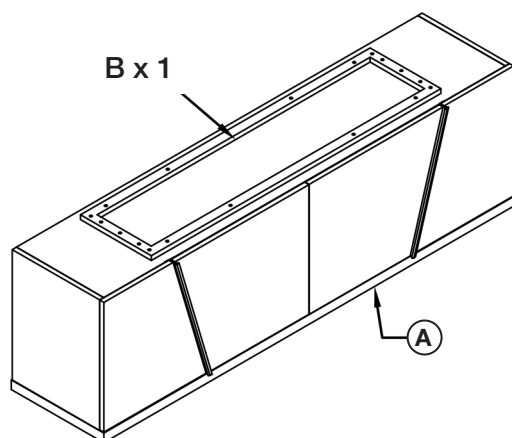


Remove metal  
frame base

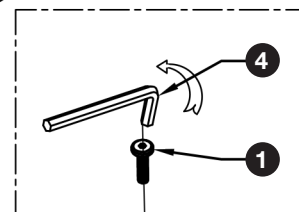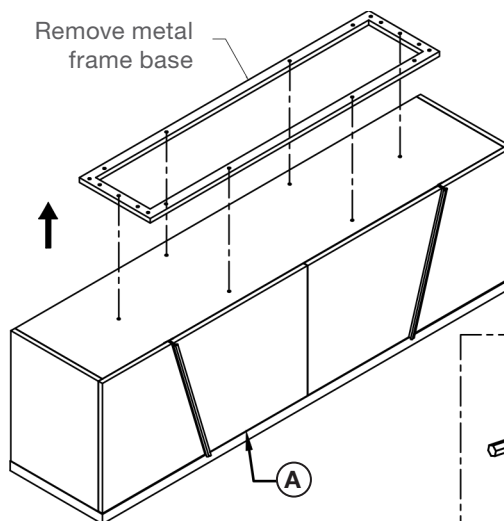


## Step 2

Please do not tighten the screws and bolts before fully assembled.

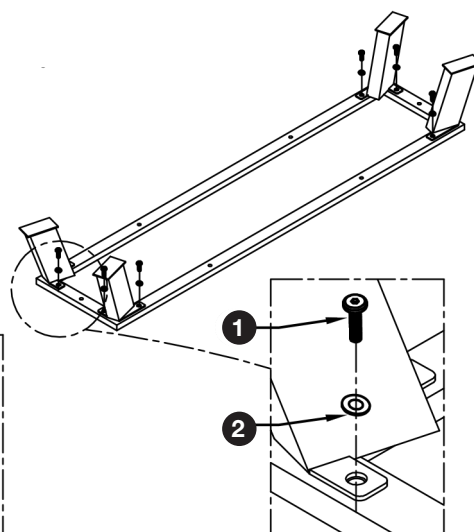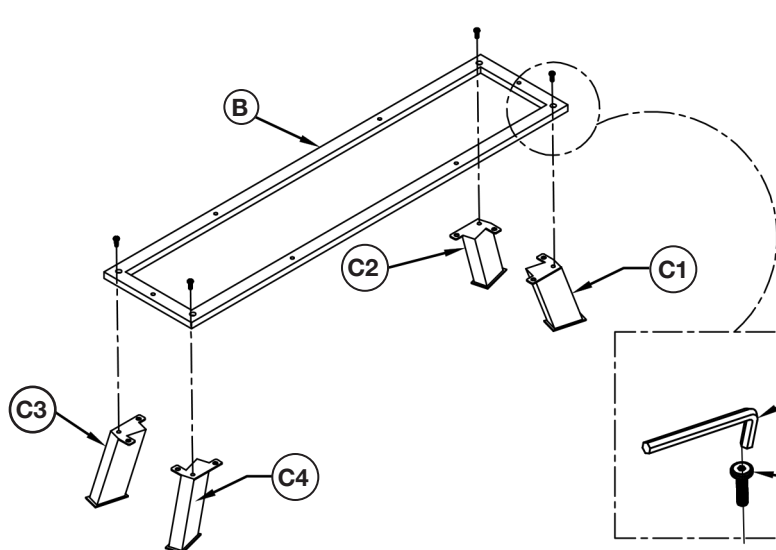


# ASSEMBLY INSTRUCTIONS | INDUSTRY MEDIA SIDEBOARD


## Step 3

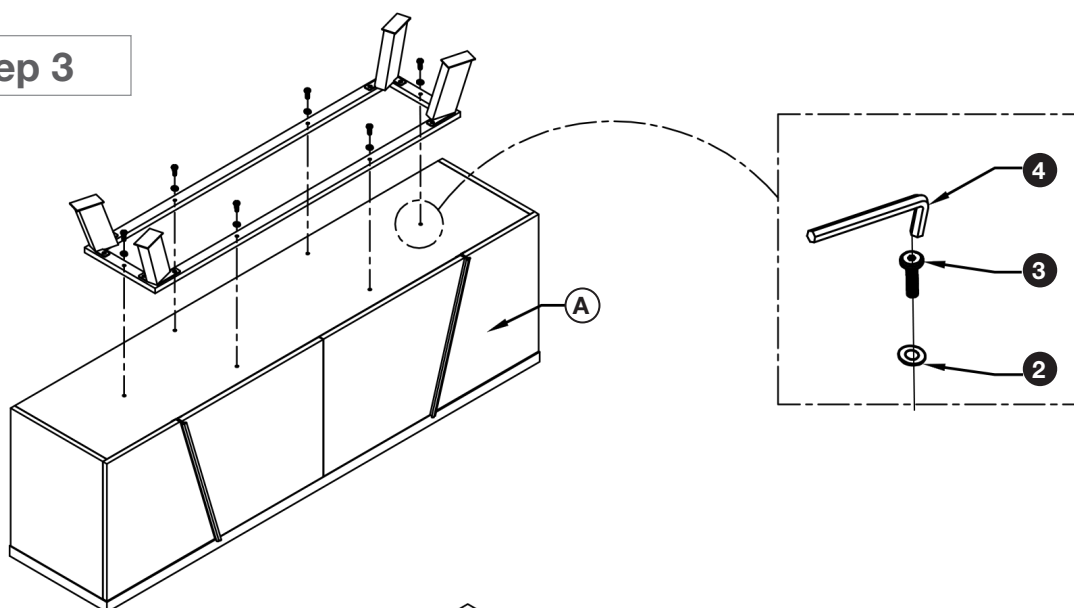



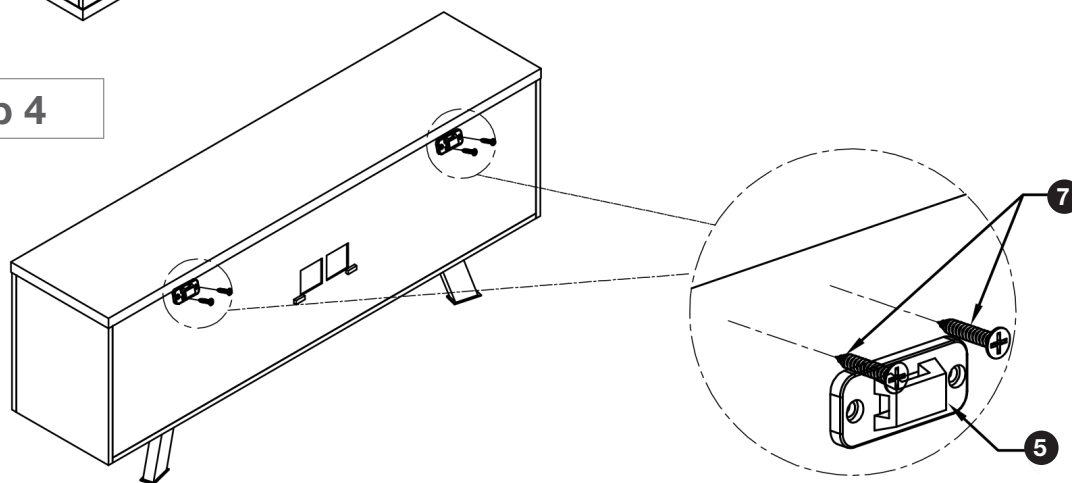



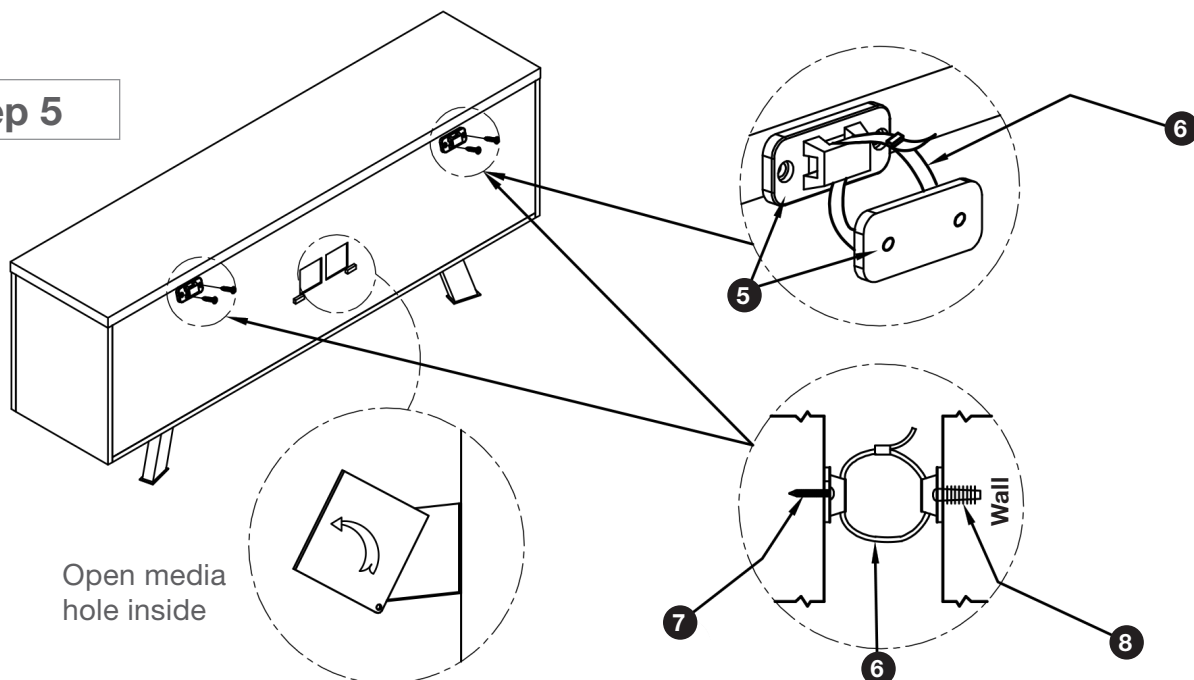

## Step 4



## Step 5



# ASSEMBLY INSTRUCTIONS | INDUSTRY MEDIA SIDEBOARD

HARDWARE CHECKLIST		
1		Bolts M6x20 (12pcs)
2		Washers M6 (14pcs)
3		Bolts M6x30 (6pcs)
4		Allen Key K4 (1pc)
5		Bracket (4pcs)
6		Tie (2pcs)
7		Screw M4x20 (4pcs)
8		Screw M4x35 (4pcs)

**Finished**

