ASSEMBLY INSTRUCTIONS | COLLINA BED



PARTS CHECKLIST		
1	Side Rail	
2	Crossbars	
3	Side Rail	
4	Footboard	
5	Under Headboard	
6	Headboard	


HARDWARE CHECKLIST					
А		Wooden Dowels (24 pcs)			
В		Cams (8 pcs)			
С	6002 10	Pins (8 pcs)			
D	(d))***	Screws TBL 4MA (6 pcs)			
Е	¢,	Cams for TBL 4MA (6 pcs)			
F	(C) IIIII	Screws TBL 6MA (18 pcs)			
G	8 - Information	Screws TBL 4x20 (32 pcs)			
Н	00000	Iron Corner (4 pcs)			


Step 1

Fit the slat supports to the side rail, using the screws 4MA.




Assemble the other side reail on the slat supports. Assemble the footboard, using the pins, cams and wooden dowels

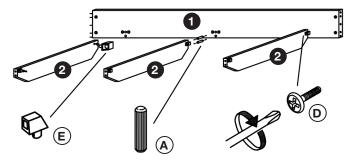


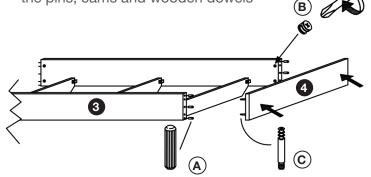



Fit the iron bars first on the under headboard and the on the headboard, using the screws 6MA

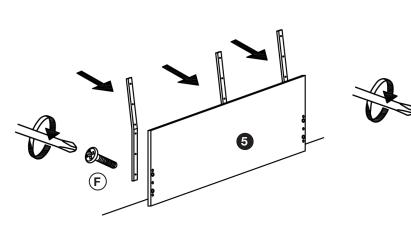

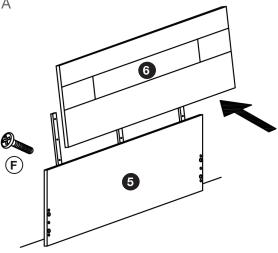

ESSENTIALS FOR LIVING®

ASSEMBLY INSTRUCTIONS | COLLINA BED

PARTS CHECKLIST



IMPORTANT: This unit requires at minimum 2 people to assemble


1	Side Rail
2	Crossbars

3 Side Rail
4 Footboard
5 Under Headboard
6 Headboard

HARDWARE CHECKLIST					
А		Wooden Dowels (24 pcs)			
В		Cams (8 pcs)			
С	exx	Pins (8 pcs)			
D	(A)***	Screws TBL 4MA (6 pcs)			
Е	\$	Cams for TBL 4MA (6 pcs)			
F	(C) IIIII	Screws TBL 6MA (18 pcs)			
G	8 million	Screws TBL 4x20 (32 pcs)			
Н	000	Iron Corner (4 pcs)			


Step 4

Assemble the headboard to the side rails using the pins, cams and wooden dowels.

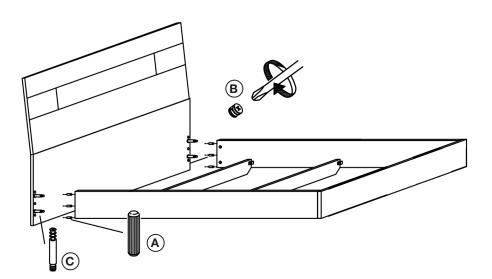



Fix the iron corner on the side rails and to the under headboard, using the screws TSP 4x20

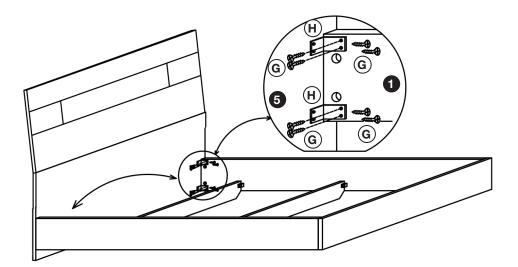

ESSENTIALS FOR LIVING®