ASSEMBLY INSTRUCTIONS | CANNES MEDIA SIDEBOARD

HARDWARE CHECKLIST		
A		Bolts M4x25 (4pcs)
B		Door Handle (4pcs)

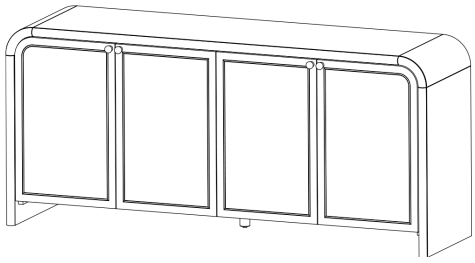

Step 1

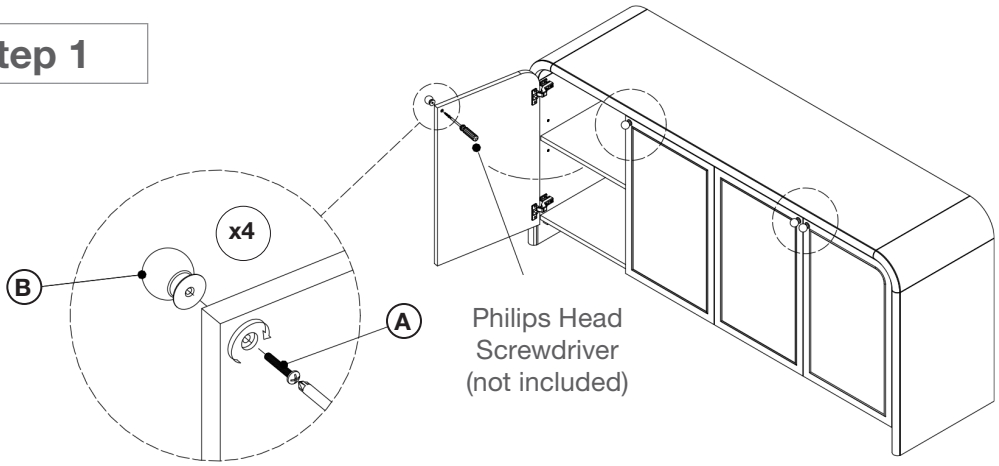

Open the door, then use hardware (A) with a Phillips screwdriver to attach handle (B) to the door panel. Repeat the same steps until all 4 doors are completed

Finish

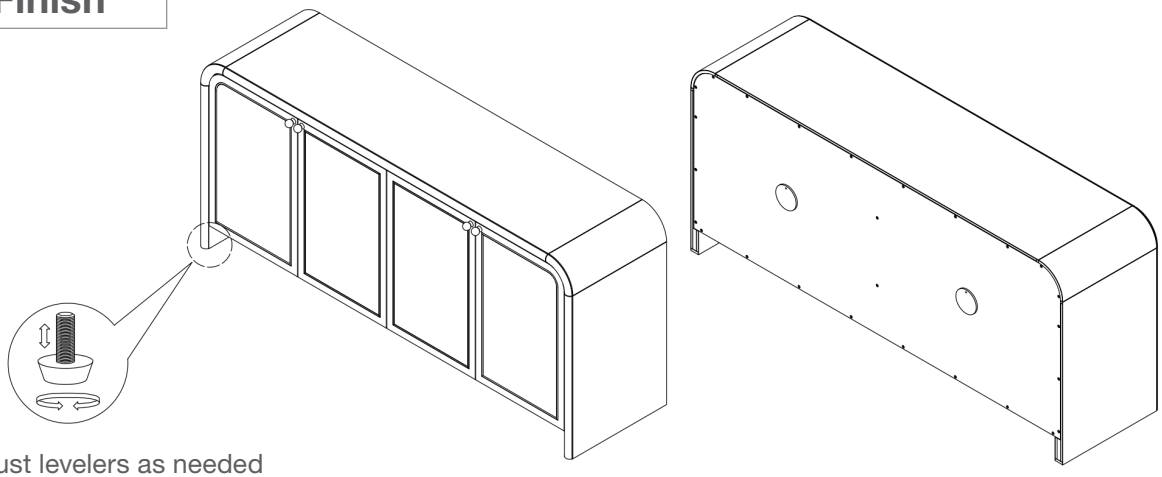

Adjust levelers as needed